




Step 1: Fix "Z" clip with drawer frame by screws

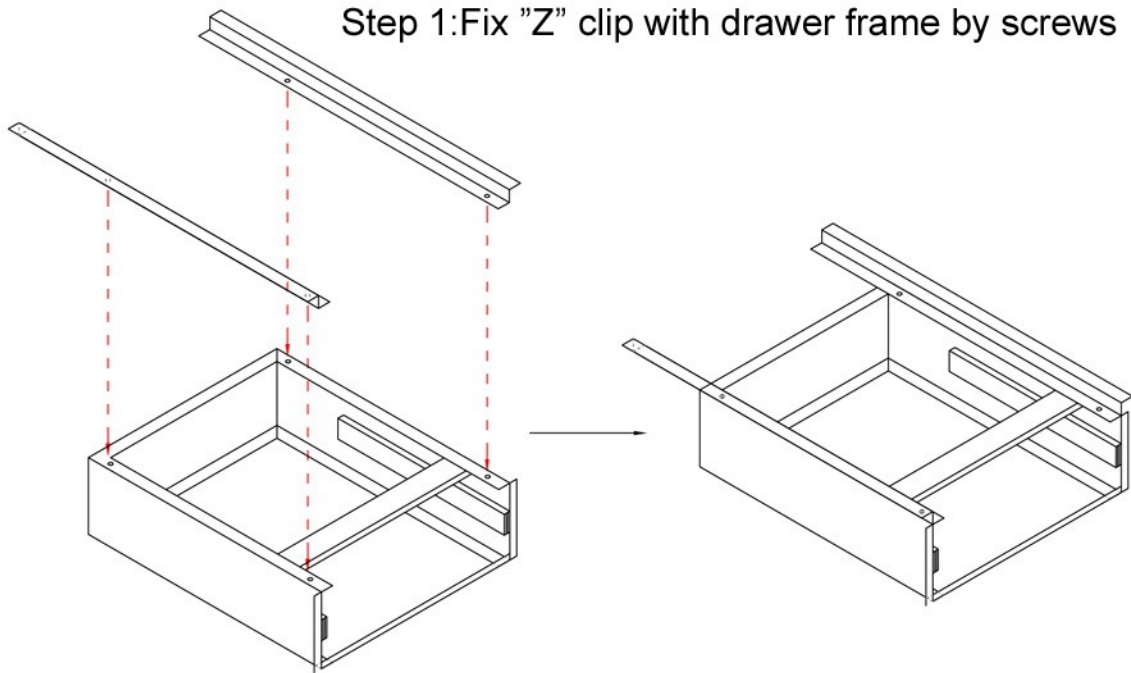

Step 2: Drill holes on hat channel and then fix the "Z" clip to hat channel by screws

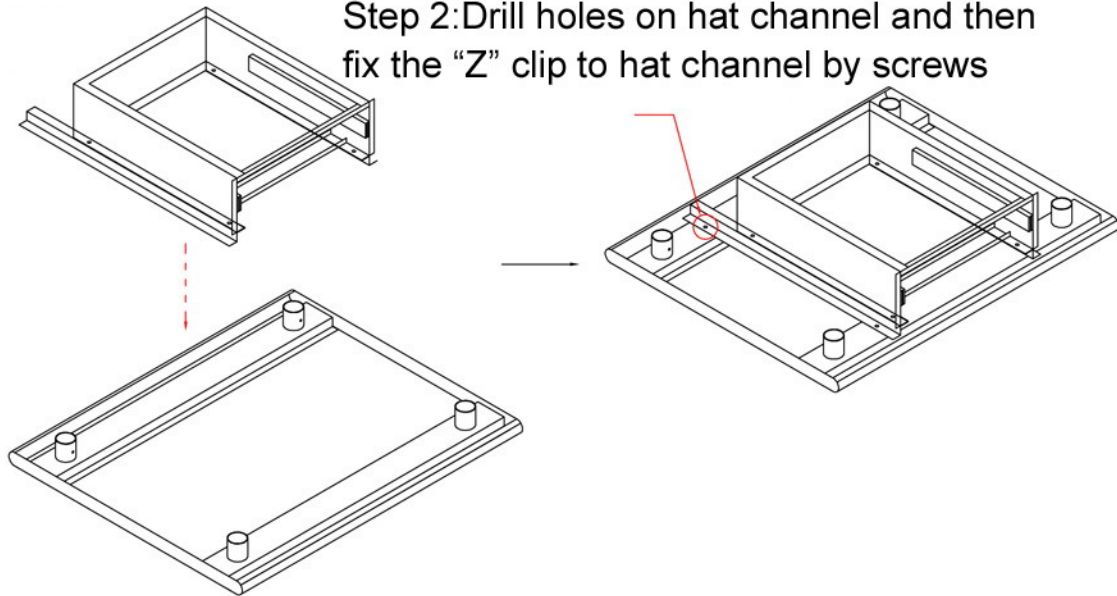

Step 3: Assemble undershelf and legs.

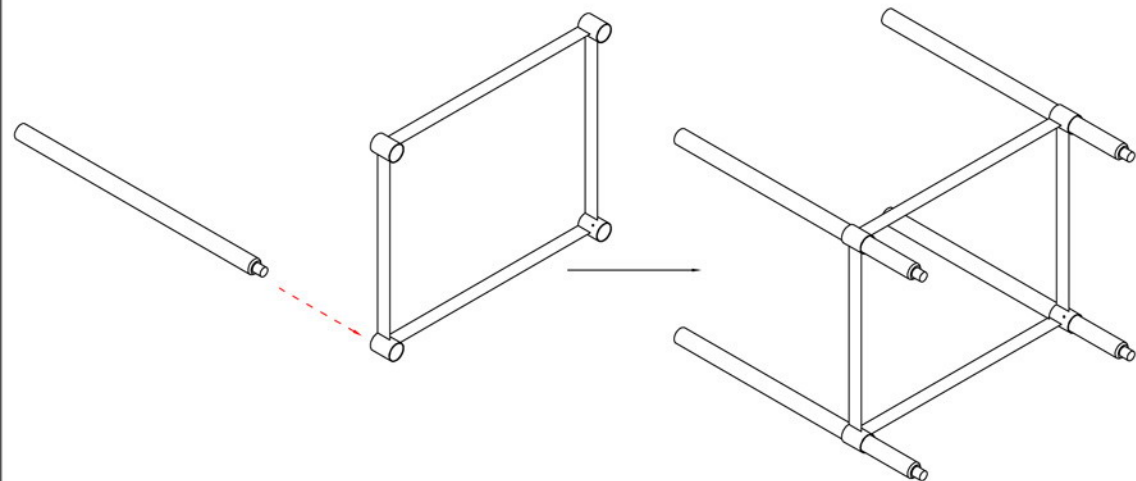

Step 4: Assemble top shelf, under shelf and legs

